





GE Cartridge mono needle 119-ds







GE Cartridge mono needle 121-ds

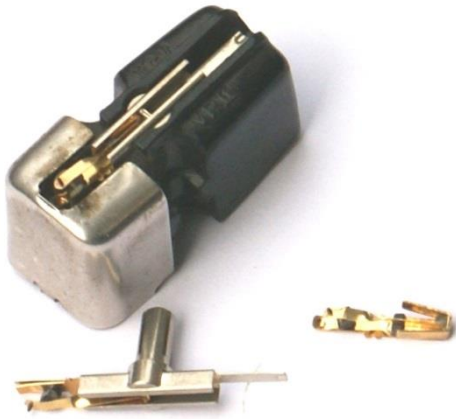



GE VR11 Cartridge mono needle 123-ds
Holder and needle 6035

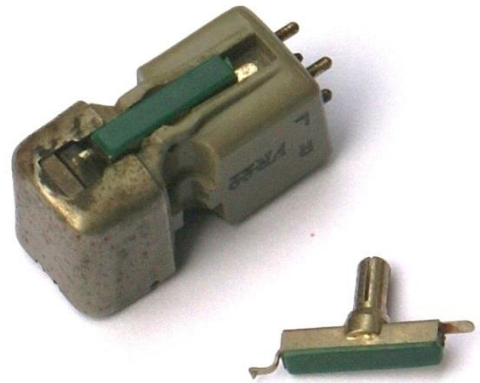

GE VR22 Cartridge stereo needle 125-stfa

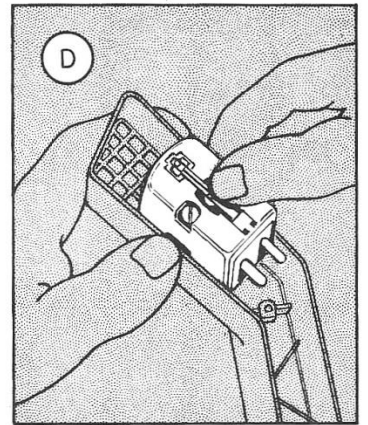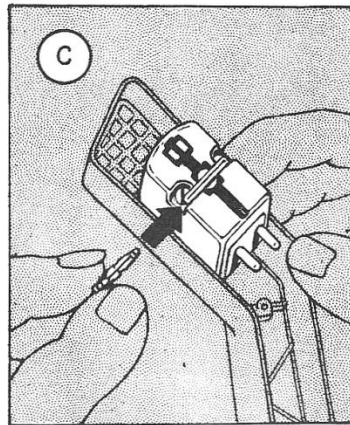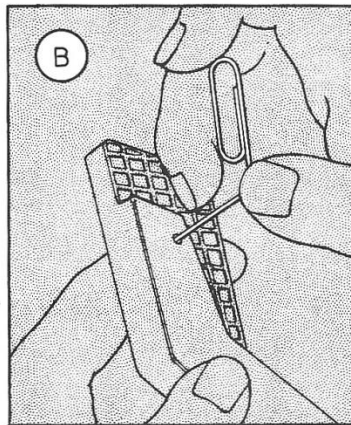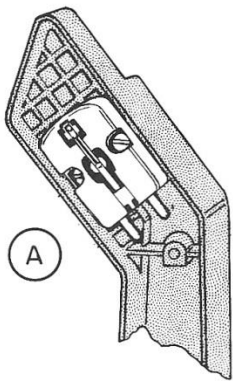

- A LIFT TONE ARM FOR ACCESS TO NEEDLE.
- B USE PAPER CLIP TO PUSH OUT NEEDLE HOLDER.
- C INSERT NEW NEEDLE IN HOLDER AS SHOWN AT E.
- D PUSH HOLDER COMPLETELY IN WITH THUMB NAIL.
- E NEEDLE AND END OF HOLDER.
- F NEEDLE TIP MUST BE CENTERED BETWEEN POLE PIECES. (SPACES AT G AND H THE SAME)

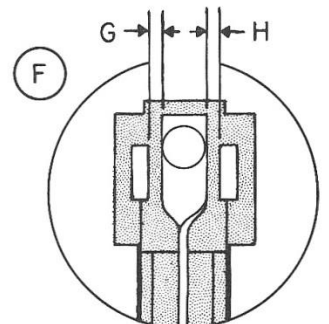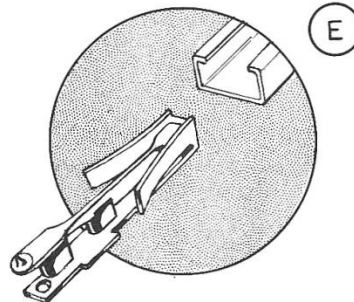

CHANGING NEEDLES